


Fitting Instructions

Focus RS MK2 GGF3001 Carbon Cold Air Induction System

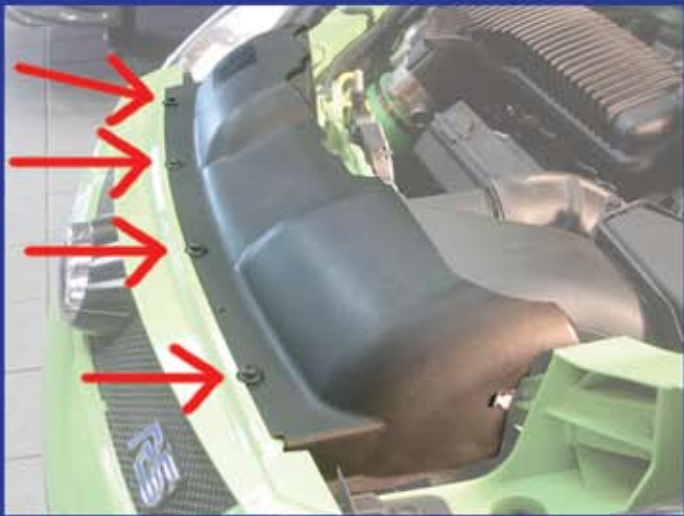

1) Remove the 4 plastic screws and take off the plastic cover.



2) Loosen the clip then pull the hose off the crossover pipe.



3) Remove the airbox assembly by pulling up and out of the rubber mounts.



4) Turn upside down and remove rubber support from standard airbox.



Fitting Instructions - Continued

Focus RS MK2 GGF3001 Carbon Cold Air Induction System



5) Refit rubber support on GGR carbon Airbox.



6) Fit rubber cap supplied over arrowed boss.



7a) Fit the GGR airbox assembly into position carefully locating the mounting into the original outer rubber mount.

7b) Connect the silicone hose to the crossover pipe then rotate to find the best position before tightening the hose clip.



8) Finally refit the plastic cover using the original screws.

